


## HL-PB5075A-A06 Linear Pendant Light Specification

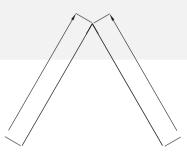



( 🐔 😳 🖉 🗷

#### Feature

-Modular triangular linear lighting offer infinite possibilities.


-High quality, energy-efficient LED Lighting for environmental protection.

-The power supply is built-in and the wiring is of the PUSH-IN shrapnel type. It is easy to install, disassemble, and maintain.

-For offices, conference rooms, supermarkets, home lighting, airports, museums, libraries, corridors, cinemas, hotels, etc.

## Luminaire parameters

-	
Model	HL-PB5075A-A06
Size	600*600*60mm
Nominal Power	36W
Lm	5000lm±10%
Beam Angle	110°
Input Voltage	AC200-240V
CCT	4000k
CRI	>80
Protection Grade	IP20
Certification	CE, ROSH
Warranty	3 years

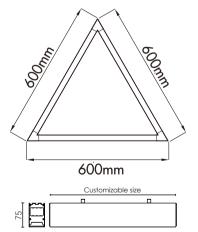

## Installation Accessories







module1

module2

Accessory


## Installation

 
#### Step 1:Assembly product





#### Step 2:Install

Please make sure that the place of installation could stand 10 times the weight of itself before installing in a place where is no vibration, no swing, and no fire risk.

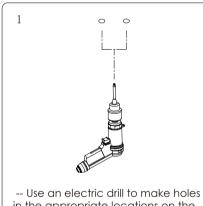




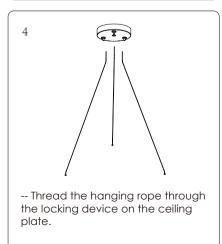


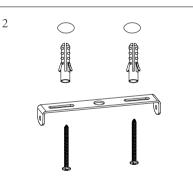


-- Secure the rubber plug in the hole;Use M4\*25 screws to secure the bracket to the rubber plugs.

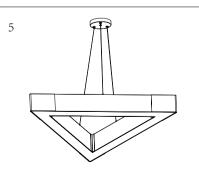


-- Attach the light fixture to the hanging rope, adjust to the desired height and position, and the installation is complete.

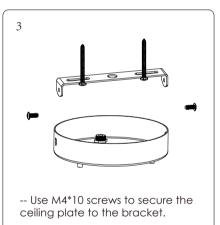

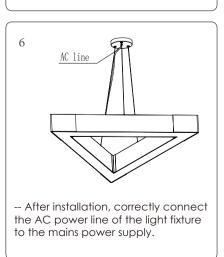

# Packing

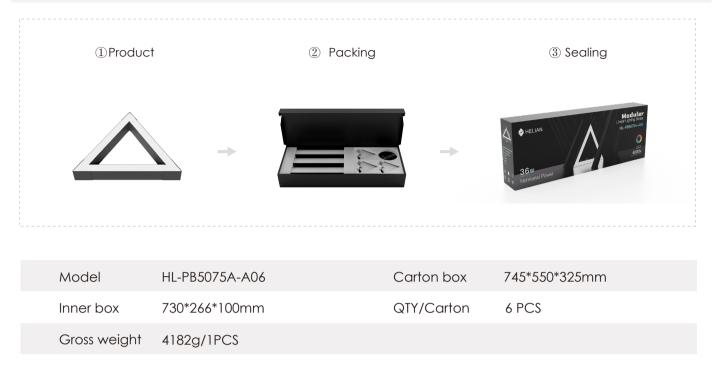

### **USER INSTRUCTIONS**

1. The installation of the unif must be done by a qualified electrician.

2. The unit must be earthed in case an earth connecting point exists.

3.Ensure that the mains is switched off during servicing.

4.Do not use buib(s) bigger than the indicated on units name-plate or packaging.

5. Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tighened.

6. Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation.