







Feature

- -Modular triangular linear lighting offer infinite possibilities.
- -High quality, energy-efficient LED Lighting for environmental protection.
- -The power supply is built-in and the wiring is of the PUSH-IN shrapnel type. It is easy to install, disassemble, and maintain.
- -For offices, conference rooms, supermarkets, home lighting, airports, museums, libraries, corridors, cinemas, hotels, etc.

















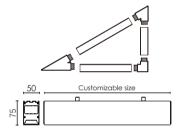

Luminaire parameters				
Model	HL-PB5075A-C06			
Size	600*520*304mm			
Nominal Power	40W			
Lm	6000lm±10%(@4000K)			
Beam Angle	110°-120°			
Input Voltage	AC100-277V			
CCT	2700-6500k			
CRI	>80			
Protection Grade	IP20			
Certification	CE, ROHS, UL			
Warranty	3 years			

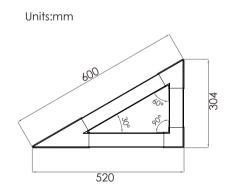

Installation Accessories







module3(90°)





module4


Accessory

module1(30°)


module2(60°)

Installation

Step 1:Assembly product.(two methods)

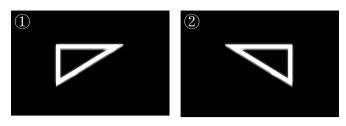

(Method 1) Please assemble the modules corresponding to the correct angles.

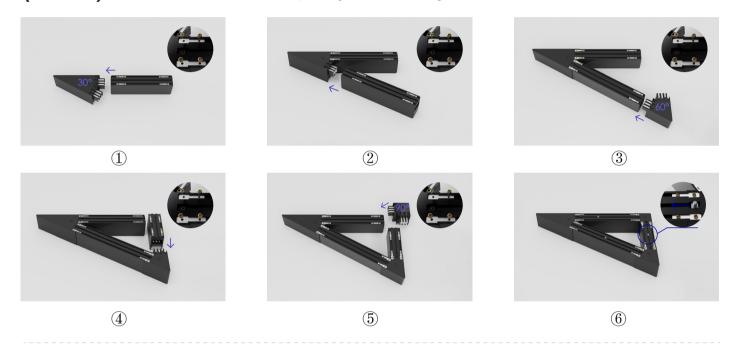


(Method 2) Please assemble the modules corresponding to the correct angles.




Step 2:Install


Please make sure that the place of installation could stand 10 times the weight of itself before installing in a place where is no vibration, no swing, and no fire risk.

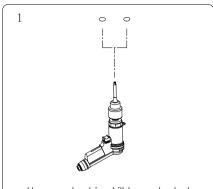


-- Use an electric drill to make holes in the appropriate locations on the wooden board or cement wall.

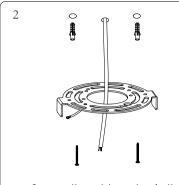


-- Secure the rubber plug in the hole; Use M4*25 screws to secure the bracket to the rubber plugs.

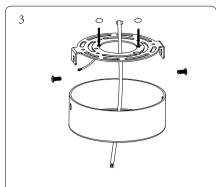


-- Use M4*10 screws to secure the ceiling plate to the bracket.

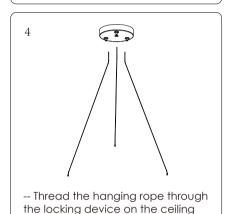

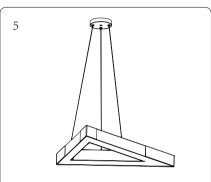


-- Attach the light fixture to the hanging rope, adjust to the desired height and position, and the installation is complete.

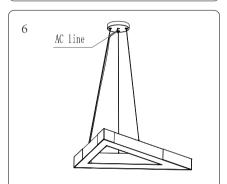

-- After installation, correctly connect the AC power line of the light fixture to the mains power supply.

Packing

plate.

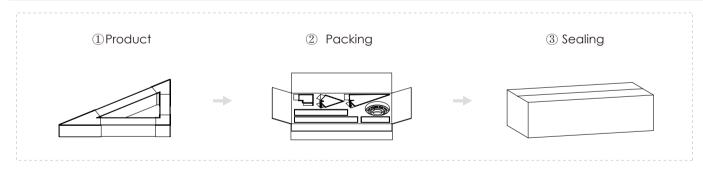

Model	HL-PB5075A-C06	Carton box	575*575*224mm
Inner box	555*275*100mm	QTY/Carton	4 PCS
NW	2.8kg/PCS	GW	3.3kg/PCS

USER INSTRUCTIONS

- 1. The installation of the unit must be done by a qualified electrician.
- 2. The unit must be earthed in case an earth connecting point exists.
- 3. Ensure that the mains is switched off during servicing.
- 4. Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tighened.
- 5.Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation.